# COLOR LCD EXPANSION MODULE

# USER GUIDE

## UC40

Nanjing Hanlong Technology Co., Ltd 86-25-84658050 www.hanlongtek.com support@hanlongtek.com

# Notices Information

## Copyright

Copyright © 2005 - 2014 Nanjing Hanlong Technology CO., LTD. All rights reserved.

Nanjing Hanlong Technology Co., LTD. owns all the right to revise and change this document at any time. And all the illustrations and instructions in this paper are subject to the copyright protection of legal law. No parts of this document may be used or reproduced, transmitted by the third parties for any purposes without the express written permission of Nanjing Hanlong Technology Co., LTD.

When this document is made available on Hanlong's web page, hanlong Technology Co., LTD. gives its right to download and print copies of this content only for private use as a user manual. No parts shall have the right to alter, modify or use as commercial means without the express written permission of Nanjing Hanlong Technology Co., LTD.

## Safety cautions

- To use the device follow the instructions in this manual.
- To use the power adapter that delivered with the device. Other power adapters may damage the device.
- The device is only for indoor use. And also avoid in high humidity, water and some other liquids.
- Do not use the device during thunderstorms.
- CE
- FCC

## Disposal of the phone

This symbol indicates that the product is classified as electrical or electronic equipment and should not be disposed of with other commercial or household waste at the end of its working life.

## Cleaning

To clean the device, use an anti-static cloth. Please avoid cleaning liquids as they might damage the surface or internal electronics of the phone

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# Table of Content

Notices Information ..... 1
Copyright ..... 1
Safety cautions ..... 1
Disposal of the phone ..... 1
Cleaning ..... 1
Table of Content ..... 2
Getting Started ..... 4
Packing List ..... 4
Expansion Module Installation ..... 6
1. Connect the expansion module and IP Phone ..... 6
2. Attach the Foot stand ..... 6
3. Connect the IP Phone and Power ..... 7
Getting Familiar with Expansion Module ..... 8
Hardware Components Preview ..... 8
Icon Preview ..... 9
Features Configuration ..... 11
Line ..... 11
Speed Dial ..... 11
BLF ..... 12
Voice Mail ..... 13
Direct Pickup ..... 14
Group Pickup ..... 14
Call Park ..... 15
Intercom ..... 15
DTMF ..... 16
Prefix ..... 17
Local Group ..... 17
XML Group ..... 18
LDAP ..... 19
XML Browser ..... 19
Broadsoft Group ..... 19
Conference ..... 20
Forward ..... 21
Transfer ..... 21
Hold ..... 22
Group Listening ..... 22
DND ..... 23
Redial ..... 23
Call Return ..... 24
SMS ..... 25
Record ..... 25
Paging ..... 26

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

Shared Line ..... 26
Public Hold ..... 27
Private Hold ..... 28
Upgrade ..... 29

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# Getting Started

## Packing List

The package contains the following parts, please check if all the items are not missed:

1. The Expansion module device

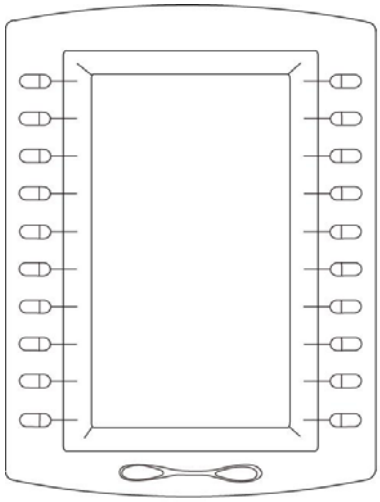

2. The Stand

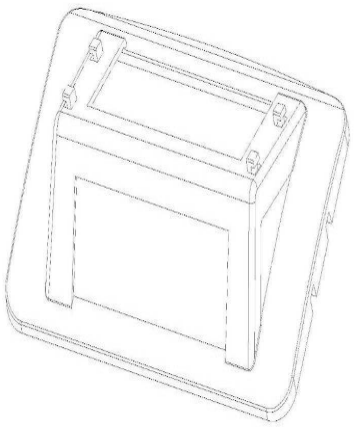

3. Connecting Sheet

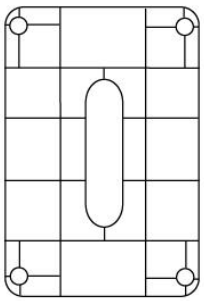

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

4. Power adapter

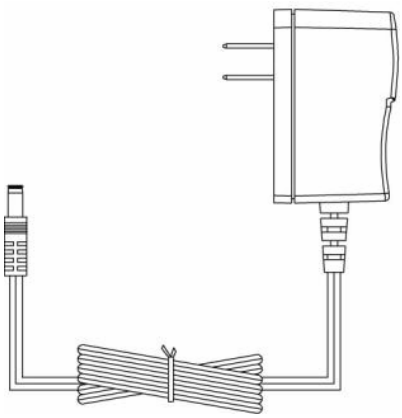

5. Ethernet cable/Connecting Cord

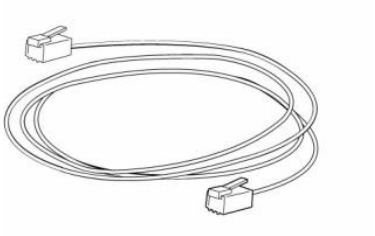

6. Quick installation reference

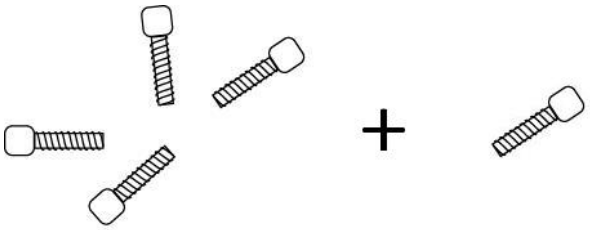

7. Quick installation reference

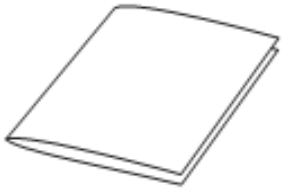

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# Expansion Module Installation

## 1. Connect the expansion module and IP Phone

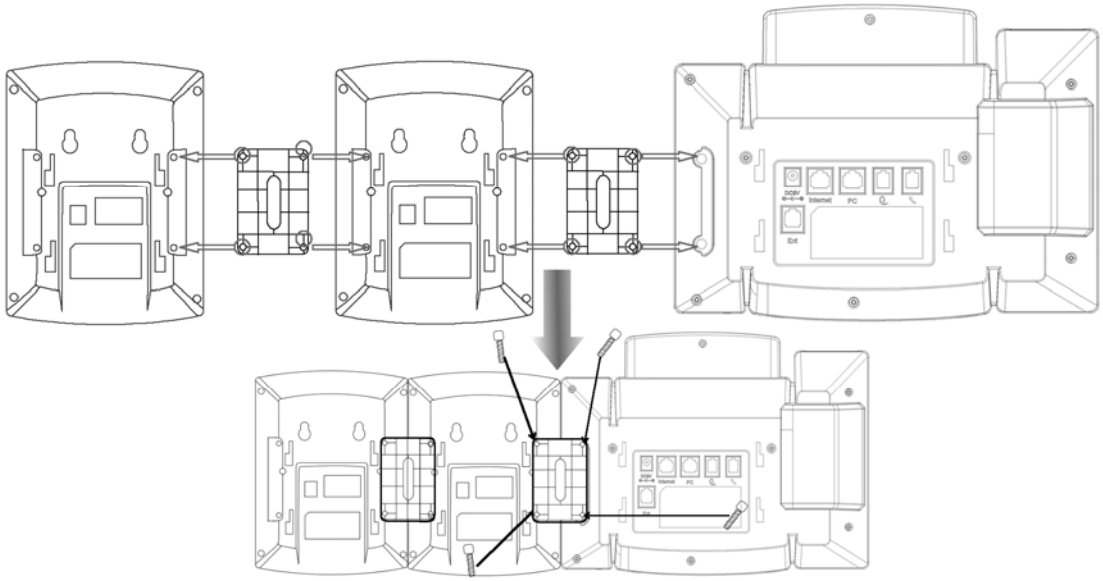

## 2. Attach the Foot stand

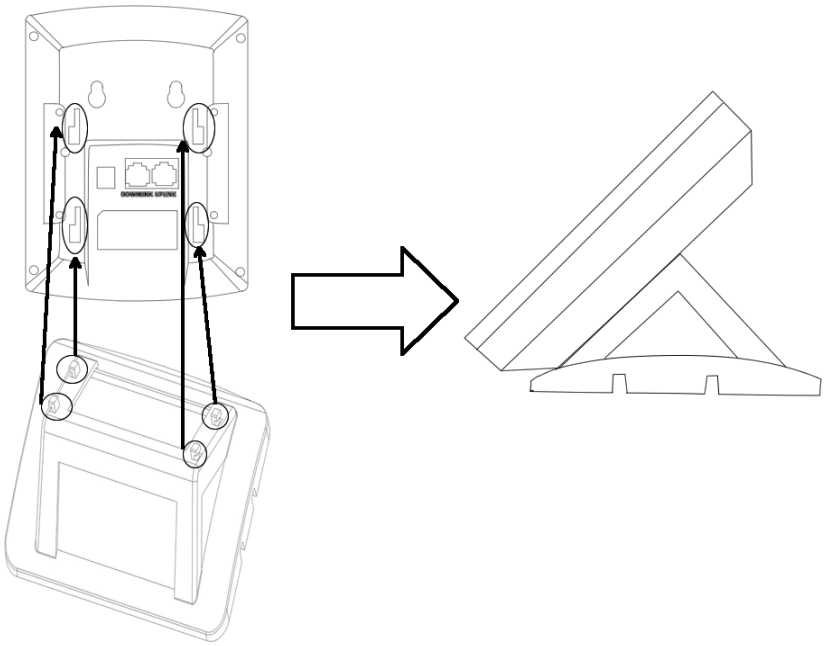

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# 3. Connect the IP Phone and Power

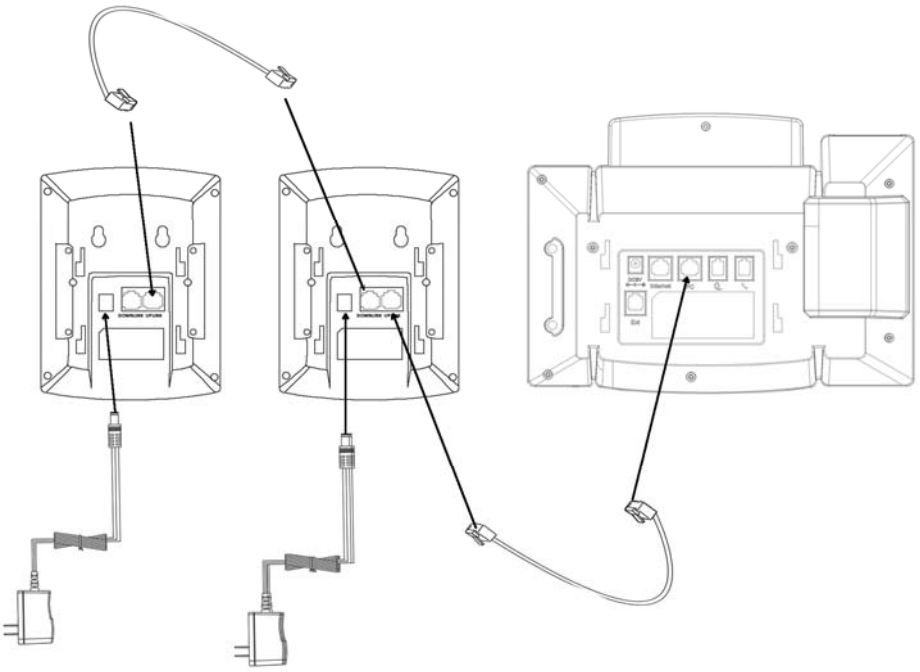

**Note：**

Our IP phone UC800 series can support up to six expansion modules.

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# Getting Familiar with Expansion Module

## Hardware Components Preview

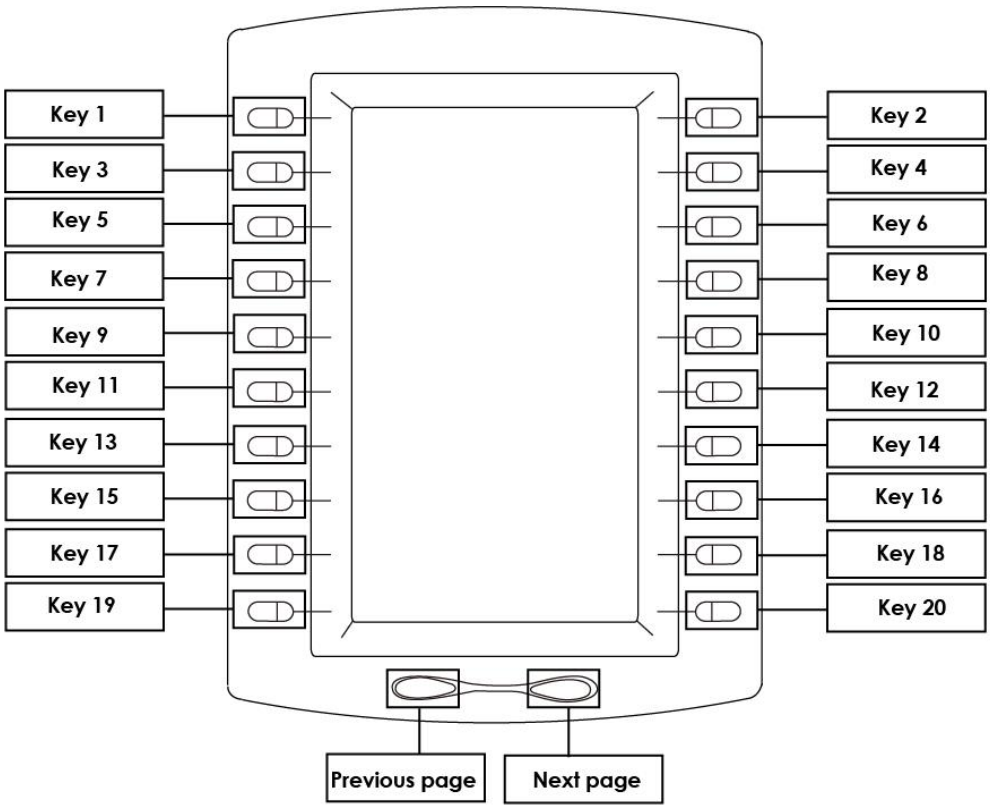


Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

## Icon Preview

| Icon | Description |
|---|---|
| | Line(Registered succeed) |
|  | Line (Unregistered) |
| | Line(Ringing) |
| | Speed Dial |
| | BLF |
| | BLF(Ringing) |
| | BLF(Talking) |
| | Voice messages |
| | Pick up |
| | Call Park |
| | Intercom/Paging |
| | DTMF |
| | Prefix |
| | XML Group |
| | Local Group |
| | XML Browser |

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

| | |
|---|---|
| | LDAP |
| | Broadsoft Group |
| | Conference |
| | Forward |
| | Transfer |
| | Hold |
| | Line on Hold |
| | DND |
| | Redial |
| | Call Return |
| | SMS |
| | Record |
| | Recording |
| | Group Listening |
| | Shared Line |
| | Other Functions |

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# Features Configuration

## Line

It works same as Line keys.

**To configure Line Feature via Web Interface**

1. Click Function keys →EXP Key.
2. Select the wanted Key and set as Line.
3. Select the Account.
4. Click the SaveSet to save the configuration.

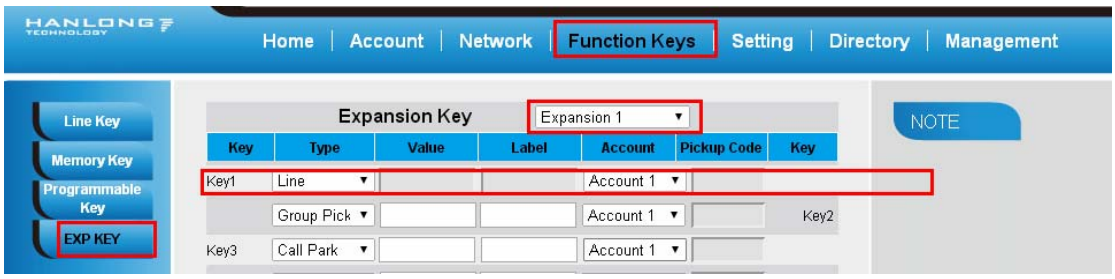


## Speed Dial

With this feature, you can dial one directory by press the definite key.

**To configure Speed Dial feature via Web Interface**

1. Click Function keys →EXP Key.
2. Select the wanted Key and set as Speed Dial.
3. Enter the desired phone number in the Value field.
4. Filled the Label displayed on LCD
5. Select the Account.

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

6. Click the SaveSet to save the configuration.

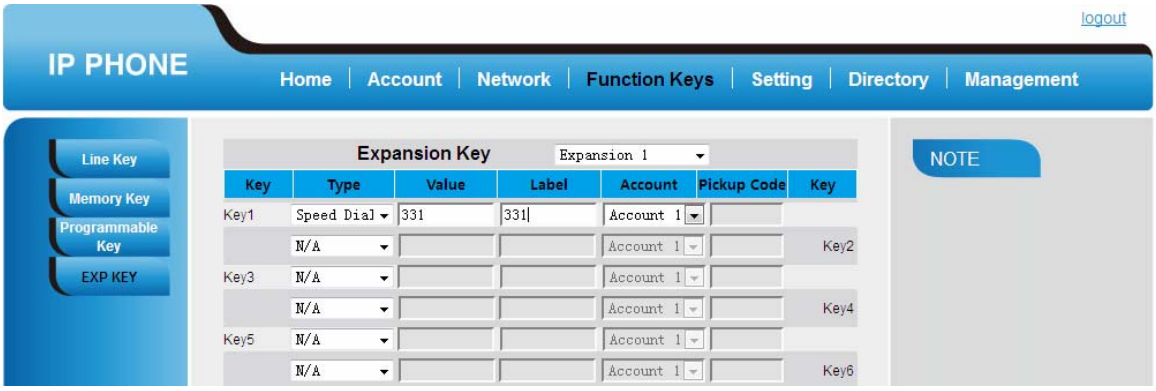


## BLF

You can use the BLF (Busy Lamp Field) feature to monitor a specific one whether his phone is busy or free.

1. When the monitored line is idle, the light is steady green.

2. When the monitored line is ringing, the light is blinking red, press the BLF key to pick the phone up directly.

3. When the monitored line is calling or in a conversation, the light is steady red.

**To configure a BLF key by web**

1. Click Function keys → EXP Key.

2. Select the desired Key and select BLF in the Type.

3. Enter the monitored phone number in the Value field.

4. Filled the Label displayed on LCD.

5. Select the Account.

6. Filled the Pickup code.

7. Click the SaveSet to save the configuration and then restart.

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

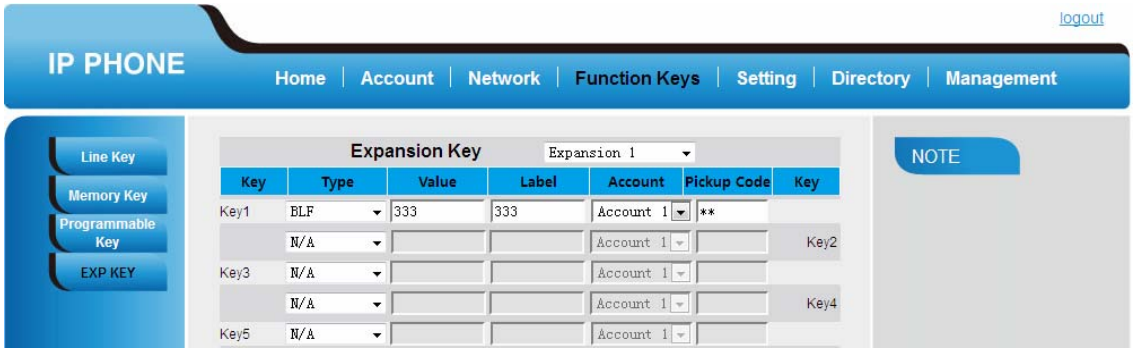


**Note:**

This feature is not available on all servers. For more information, contact your system administrator.

In the Web interface, you can also active the pickup function(Setting->Features->Call Pickup) and set the pickup code. For example, if you set the BLF value as 333, and the pickup code is **, then when there is an incoming call to 333, press the BLF key, it will call out the ** automatically to pickup the incoming call on 333.

## Voice Mail

**To configure Voice Mail feature via Web Interface**

1. Click Function keys → EXP Key.
2. Select the wanted Key.
3. Enter the desired voicemail feature codes in the Value field.
4. Filled the Label displayed on LCD.
5. Select the Account.
6. Click the SaveSet to save the configuration.

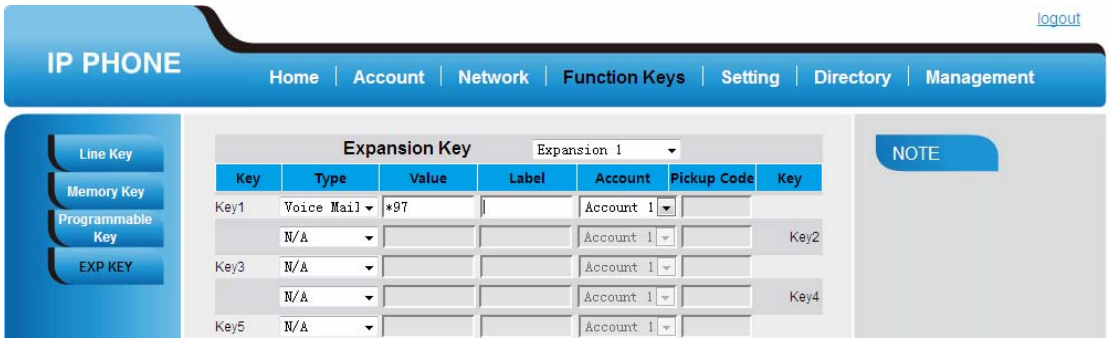


Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# Direct Pickup

With this feature, you can pick up the set line when it ringing.

**To configure Direct Pickup feature via Web Interface**

1. Click Function keys → EXP Key..
2. Select the wanted Key and set as Direct Pickup.
3. Enter the pickup code and followed the desired phone number in the Value field.
4. Filled the Label displayed on LCD.
5. Select the Account.
6. Click the SaveSet to save the configuration.

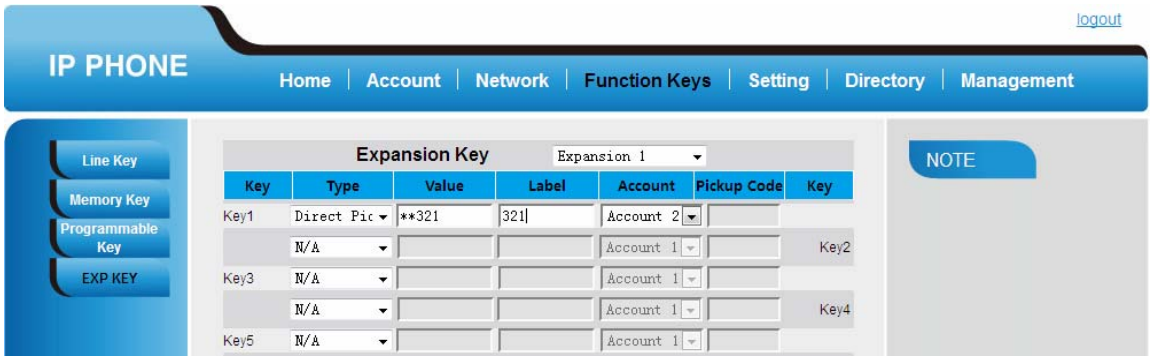


# Group Pickup

With this feature, you can pick up the specified group that you want incoming calls.

**To configure the Group Pick up via Web interface**

1. Click Function keys → EXP Key.
2. Select the desired Key and select Group Pickup in the Type.
3. Enter the pickup code and followed the desired Group number in the Value field.
4. Filled the Label displayed on LCD..
5. Click the SaveSet to save the configuration.

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# Call Park

With this feature, you can put a call on hold and continue the conversation from another phone.

**To configure the Call Park via Web interface**

1. Click Function key → EXP Key.
2. Select the desired Key and select Call Park in the Type.
3. Enter the park feature codes in the value field.
4. Filled the Label displayed on LCD.
5. Select the Account.
6. Click the SaveSet to save the configuration.

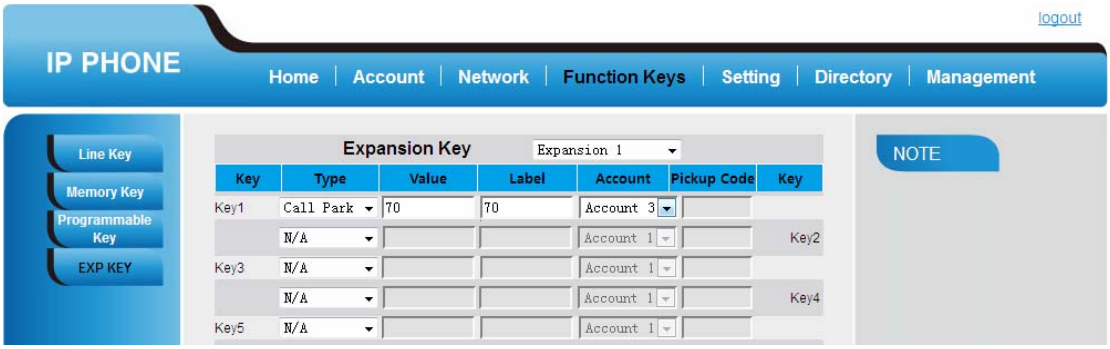


**Note:**
Your VoIP PBX must support this feature and enable this feature.

# Intercom

When use the intercom feature, you can quickly get access connect to the configured EXPension.

**To configure Intercom feature via Web Interface**

1. Click Function keys → EXP Key.
2. Select the wanted Key and select Intercom as the Type.

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

3. Enter the intercom codes followed by desired number in the Value field.

4. Filled the Label displayed on LCD.

5. Select the Account.

6. Click the SaveSet to save the configuration.

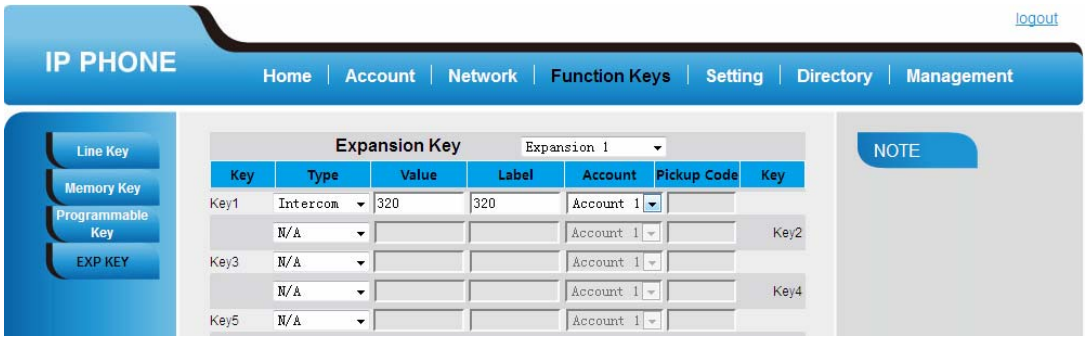


**Note:**
This feature is not available on all servers. For more information, contact your system administrator, And make sure the intercom EXPension enables the Auto-answer function.

## DTMF

When the key is configured as DTMF key, You are allowed to send out the desired DTMF number during the conversation.

**To configure the DTMF via Web interface**

1. Click Function keys → EXP Key.

2. Select the desired Key and select DTMF in the Type.

3. Fill the value with the Desired DTMF number

4. Enter the Label displayed on LCD.

5. Click the SaveSet to save the configuration.

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

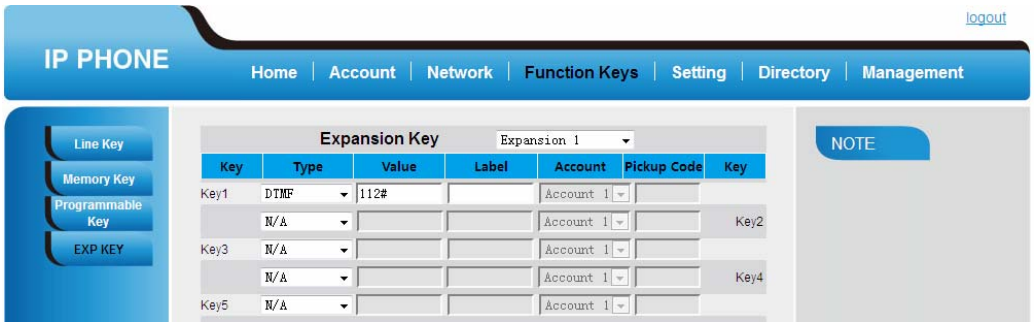


## Prefix

If the key is configured as Prefix key, you can set the number prefix (e.g. Before the number plus 9), then you don't input 9, press the key and 9 will display on the LCD interface.

**To configure the Prefix via Web interface**

1. Click Function key → EXP Key.

2. Select the desired Key and select Prefix in the Type.

3. Fill the value with number that you want to set as prefix

4. Enter Label displayed on LCD.

5. Click the SaveSet to save the configuration.

Then when you press this key, the set value is input directly.

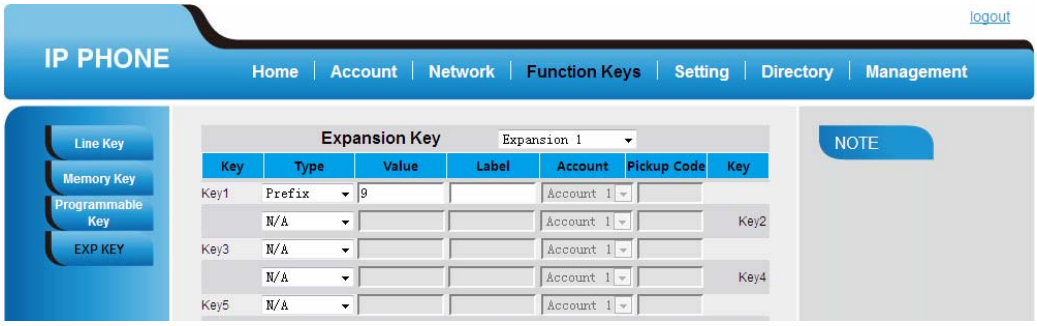


## Local Group

When use the Local Group feature, press the key and enter the local Contacts interface quickly.

**To configure the Local Group via Web interface**

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

1. Click Function key → EXP Key.

2. Select the desired Key and select Local group in the Type.

3. Filled the Label displayed on LCD.

4. Click the SaveSet to save the configuration.

Then you can press the local group key to access the pre-defined contact group in the local directory quickly.

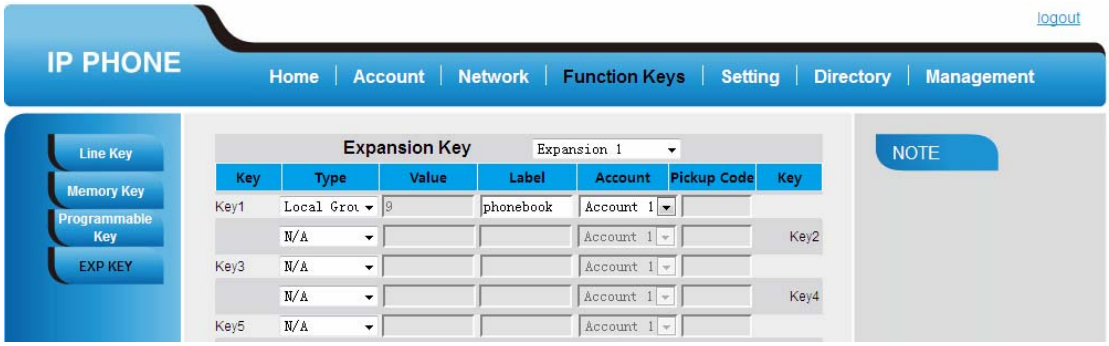


## XML Group

When use the XML Group feature,press the key and enter the Remote Contacts interface quickly.

**To configure the Local Group via Web interface**

1. Click Function key → EXP Key.

2. Select the desired Key and select XML group in the Type.

3. Filled the Label displayed on LCD.

4. Click the SaveSet to save the configuration.

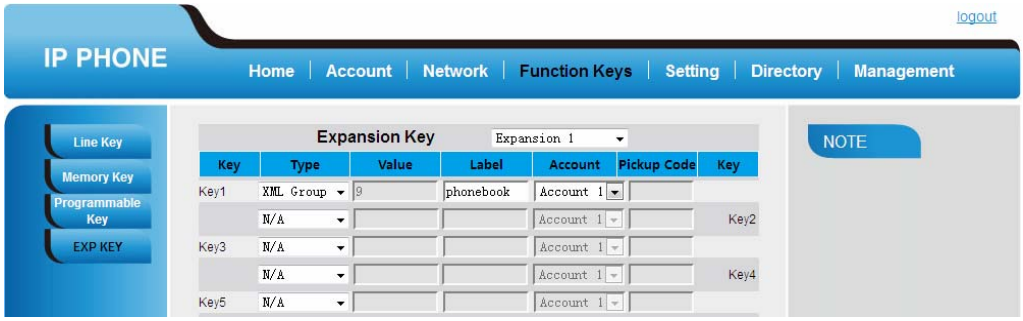


Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# LDAP

When use the LDAP feature, you can get the LDAP Phonebook directly.

**To configure the LDAP via Web interface**

1. Click Function key → EXP Key.
2. Select the desired Key and select LDAP in the Type.
3. Filled the Label displayed on LCD.
4. Click the SaveSet to save the configuration.

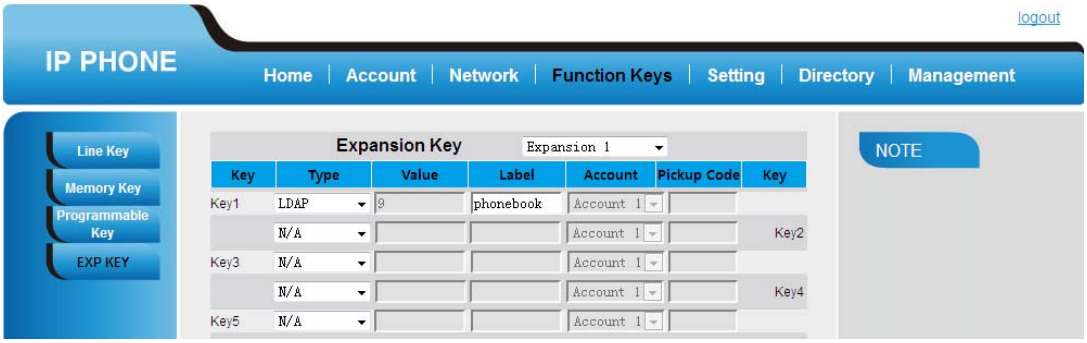


# XML Browser

**To configure the XML Browser via Web interface**

1. Click Function key → EXP Key.
2. Select the desired Key and select xml browser in the Type.
3. Filled the value and Label.
4. Click the SaveSet to save the configuration.

# Broadsoft Group

When use the BroadSoft Group feature,press the key and enter the Remote Contacts interface quickly.

**To configure the Broadsoft group via Web interface**

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

1. Click Function key → EXP Key.

2. Select the desired Key and select Broadsoft group in the Type.

3. Filled the Label displayed on LCD.

4. Click the SaveSet to save the configuration.

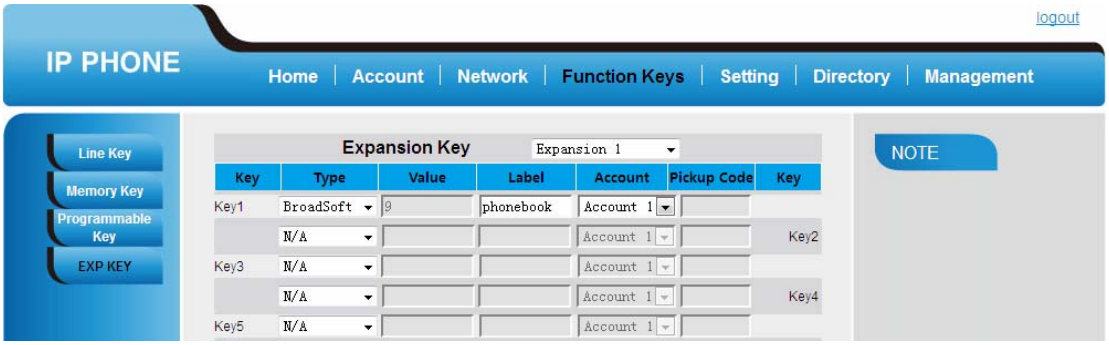


## Conference

The HanLong IP Phone supports up to 5-way conference. You are allowed to configure the programmable key to be used as a conference key.

**To configure Conference via Web Interface**

1. Click Function keys →EXP Key.

2. Select the desired Key and select Conference in the Type.

3. Enter the Label displayed on LCD.

4. Click the SaveSet to save the configuration.

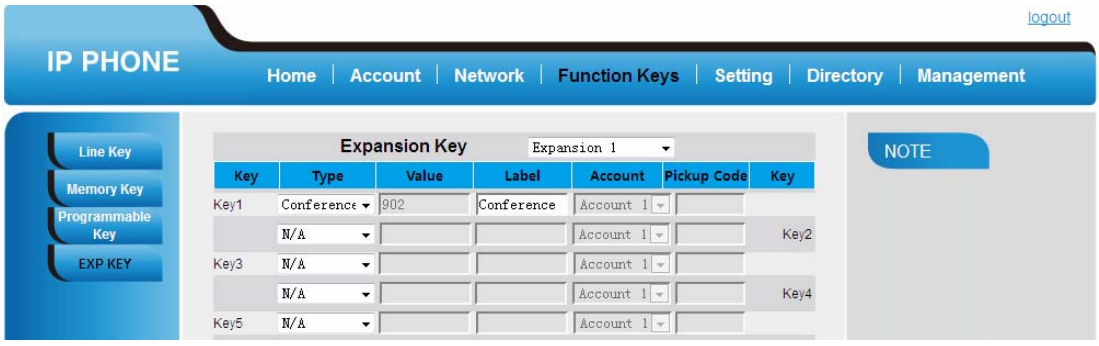


Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# Forward

If the key is configured as Forward key, press this key under the idle status, the IP phone will turn to the Always Forward interface and you can set the Forward to number, then when there is any call to the EXPension number will be forwarded to the set number automatically.

**To configure Forward via Web Interface**

1. Click Function keys →EXP Key.
2. Select the desired Key and select Forward in the Type.
3. Enter the Value with the number you want to forward
4. Enter the Label displayed on LCD.
5. Click the SaveSet to save the configuration.

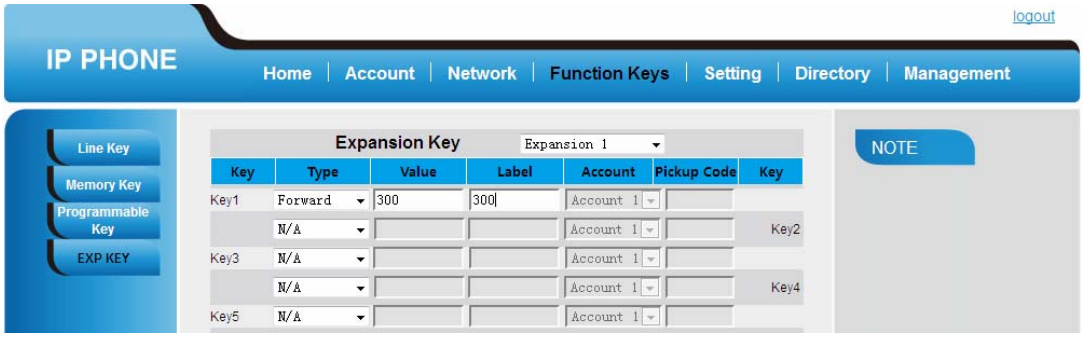


# Transfer

You are able to configure the key as a transfer key to perform the Blind/Attended Transfer.

**To configure Transfer via Web Interface**

1. Click Function keys →EXP Key.
2. Select the desired Key and select Transfer in the Type.
3. Enter the Value with the number that wanted transfer to
4. Enter the Label displayed on LCD.
5. Click the SaveSet to save the configuration.

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

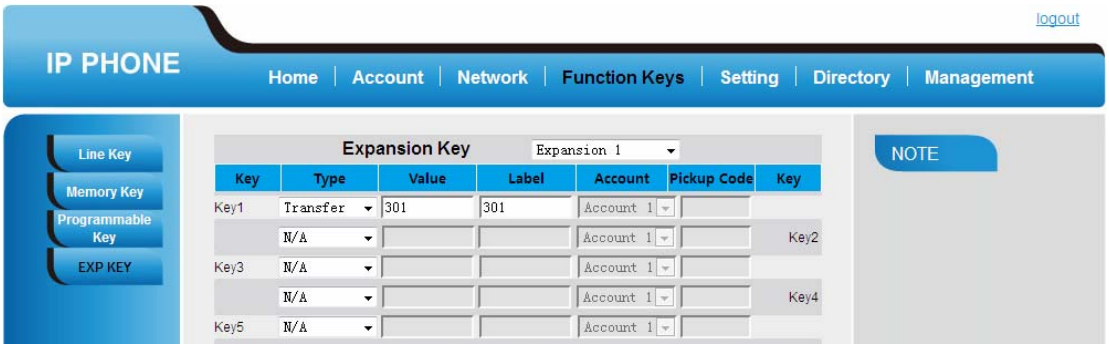
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 Transfer 301 301 Account 1
N/A Account 1 Key2
Key3 N/A Account 1
N/A Account 1 Key4
Key5 N/A Account 1
NOTE

## Hold

The key can be configured as a hold key. You can use this key to hold and resume a call during the conversation.

**To configure Hold via Web Interface**

1. Click Function keys →EXP Key.
2. Select the desired Key and select Hold in the Type.
3. Enter the Label displayed on LCD.
4. Click the SaveSet to save the configuration.

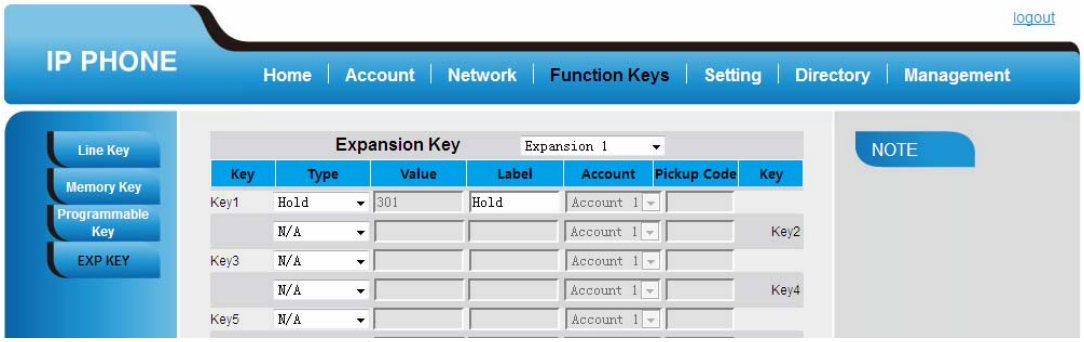
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 Hold 301 Hold Account 1
N/A Account 1 Key2
Key3 N/A Account 1
N/A Account 1 Key4
Key5 N/A Account 1
NOTE

## Group Listening

**To configure Group listening via Web Interface**

1. Click Function keys →EXP Key.

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

2. Select the desired Key and select Group listening in the Type.

3. Enter the Label displayed on LCD.

4. Click the SaveSet to save the configuration.

## DND

If the key is configured as DND key, you are allowed to active the DND function immediately when you press it and the phone is to reject all incoming calls automatically. Press it again to deactivate DND mode.

**To configure DND via Web Interface**

1. Click Function keys →EXP Key.

2. Select the desired Key and select DND in the Type.

3. Enter the Label displayed on LCD.

4. Click the SaveSet to save the configuration.

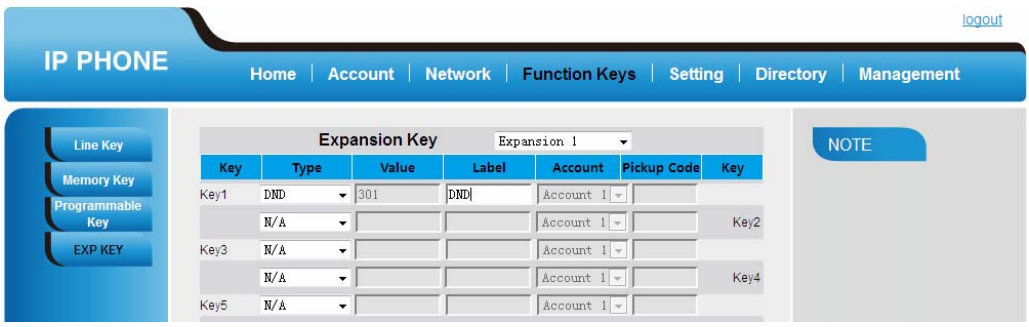


## Redial

If the key is configured as Redial key, you can redial the last placed call from the IP Phone.

**To configure Redial via Web Interface**

1. Click Function keys →EXP Key.

2. Select the desired Key and select redial in the Type.

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

3. Enter the Label displayed on LCD.

4. Click the SaveSet to save the configuration.

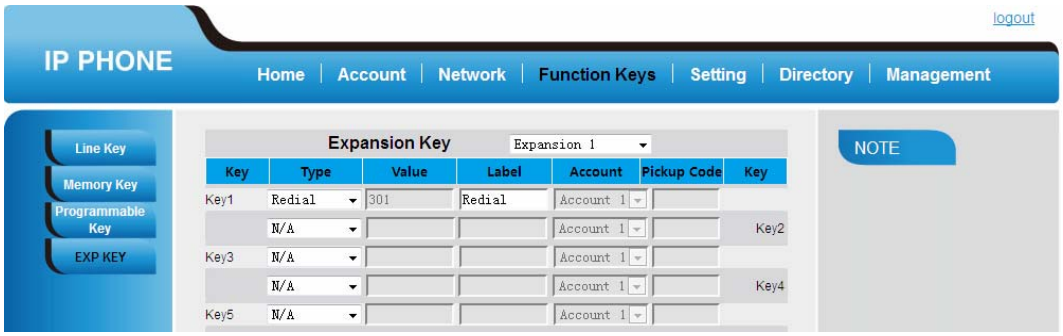


## Call Return

When the key is configured as Call Return key you are allowed to dial out the last phone call you received.

**To configure Call Return via Web Interface**

1. Click Function keys →EXP Key.

2. Select the desired Key and select Call Return in the Type.

3. Enter the Label displayed on LCD.

4. Click the SaveSet to save the configuration.

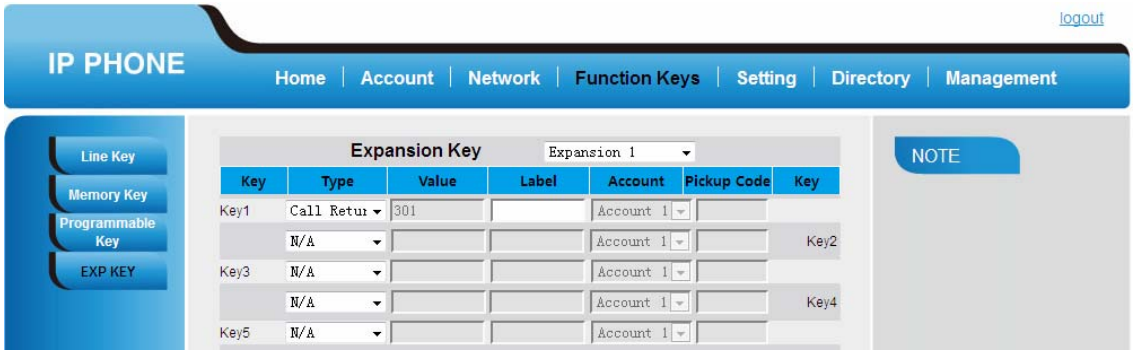


Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# SMS

**To configure SMS via Web Interface**

1. Click Function keys →EXP Key.
2. Select the desired Key and select SMS in the Type.
3. Enter the Label.
4. Click the SaveSet to save the configuration.

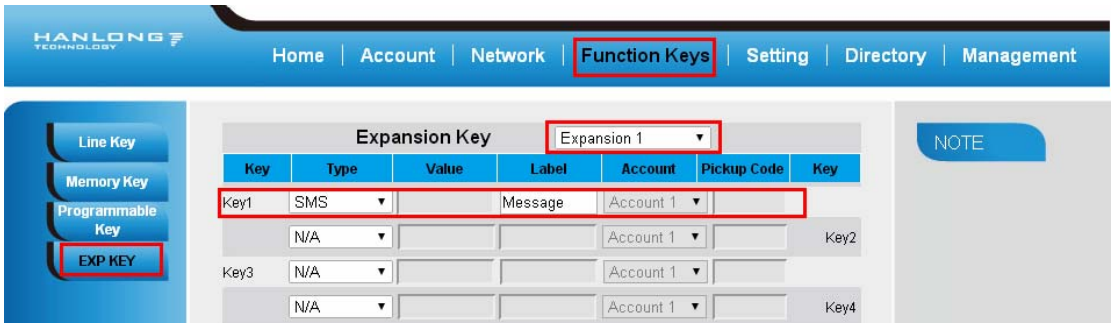


# Record

With record feature, you can record calls by pressing a record key on the phone.

**To configure the record via Web Interface**

1. Click Function keys → EXP Key.
2. Select the desired Key and select Record in the Type.
3. Enter the Label dispalyed on LCD.
4. Click the SaveSet to save the configuration.

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

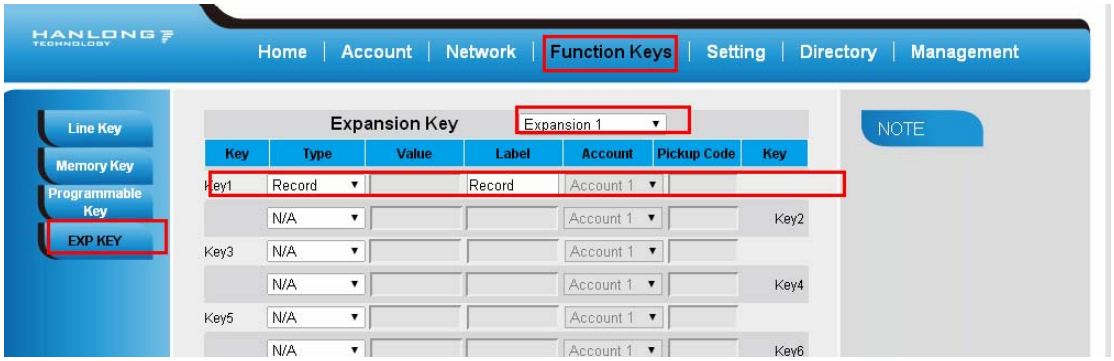


**Note:**
Please contact the system administrator whether support this feature or not.

## Paging

With this feature, you can call a phone or a group directly.

**To configure the Paging via Web interface**

1. Click Function keys → EXP Key.
2. Select the desired Key and select Paging in the Type.
3. Enter the Paging codes followed by phone number or group number
4. Enter the Label dispalyed on LCD.
5. Click the SaveSet to save the configuration.

## Shared Line

This feature allows subscribers to share SIP lines. Moreover it also provides status monitoring of the shared line.

**To configure shared line via Web Interface**

1. Click Function keys →EXP Key.
2. Select the desired Key and select Shared Line in the Type.
3. Enter the Value.

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

4. Enter the Label dispalyed on LCD.

5. Select the Account.

6. Click the SaveSet to save the configuration and then restart.

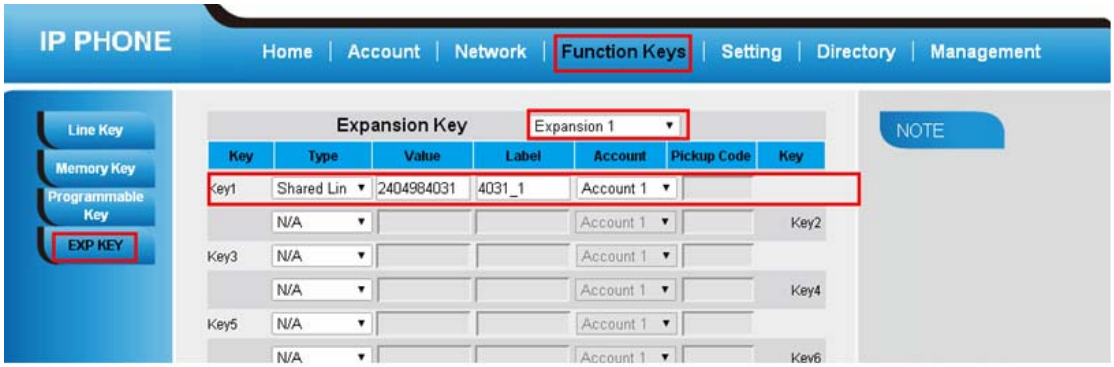


**Note:**
This feature is not available on all servers. For more information, contact your system administrator.

## Public Hold

The key can be configured as a public hold key. During a conversation, all membersbelonging to that particular SLA group can use this key to hold or resume a call.

**To configure public hold via Web Interface**

1. Click Function keys →EXP Key.

2. Select the desired Key and select public hold in the Type.

3. Enter the Label dispalyed on LCD.

4. Click the SaveSet to save the configuration.

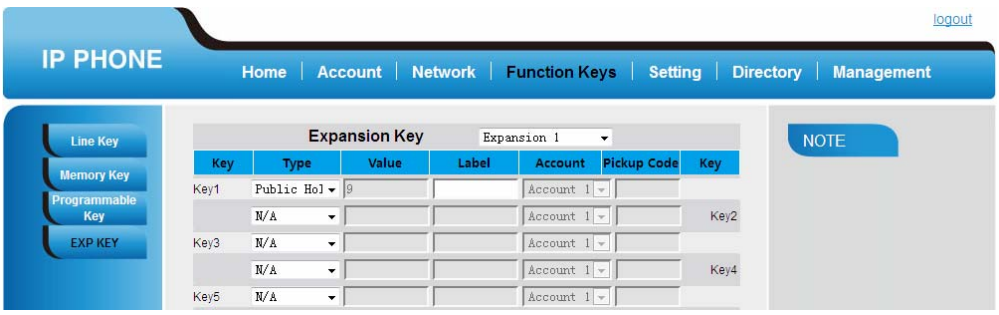


Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# Private Hold

The key can be configured as a private hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold the call, but only the initiator can resume the call.

**To configure private hold via Web Interface**

1. Click Function keys →EXP Key.

2. Select the desired Key and select public hold in the Type.

3. Enter the Label dispalyed on LCD.

4. Click the SaveSet to save the configuration.

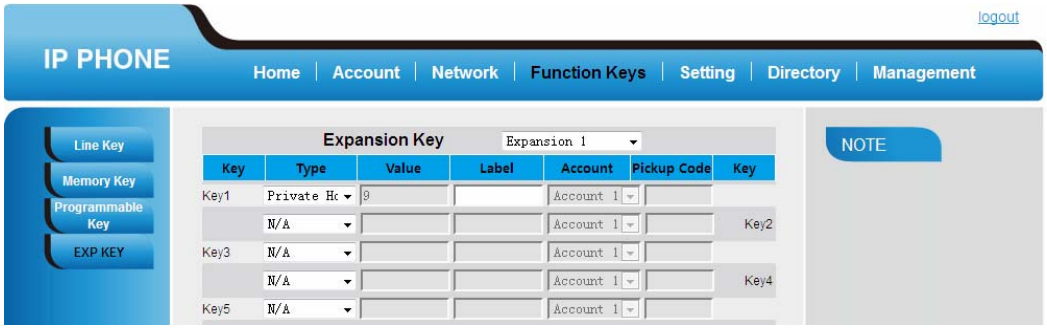


Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

# Upgrade

Two ways to upgrade for the Expansion Module

**A. Upgrade via IP Phone**

1. Connect the expansion module with IP Phone

2. Click Management→ Auto Provison

3. Choose Yes for the Self as Server

4. Put the Expansion module firmware files under the same path of the upgrade for IP Phone, and upgrade via TFTP/FTP/HTTP/HTTPS

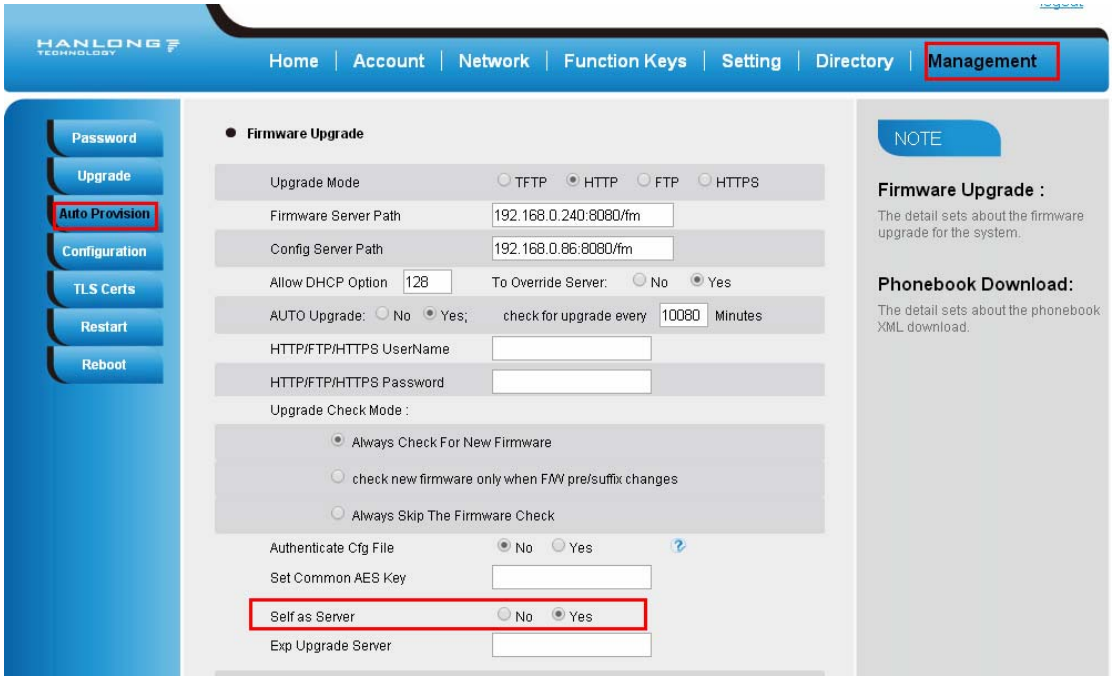


**B. Upgrade via Exp upgrade server( Only works for HTTP)**

1. Connect the expansion module with IP Phone

2. Click Management→ Auto Provison

3. Choose No for the Self as Server

4. Set the exp upgrade server path: 172.20.xxx.xx (The http server address must start with 172.20.)

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.

5. Upgrade via HTTP.

Copyright © Nanjing Hanlong Technology Co., Ltd. 2005-2014 All rights reserved.